


## INSTALLATION INSTRUCTIONS FOR 10D SWING AWAY LENS ATTACHMENT

1. Install onto top of shade as shown. Place clip onto shade ridge and slide bottom of clip until it snaps onto shade.
2. When using lens DO NOT force swing away arm beyond its limits.

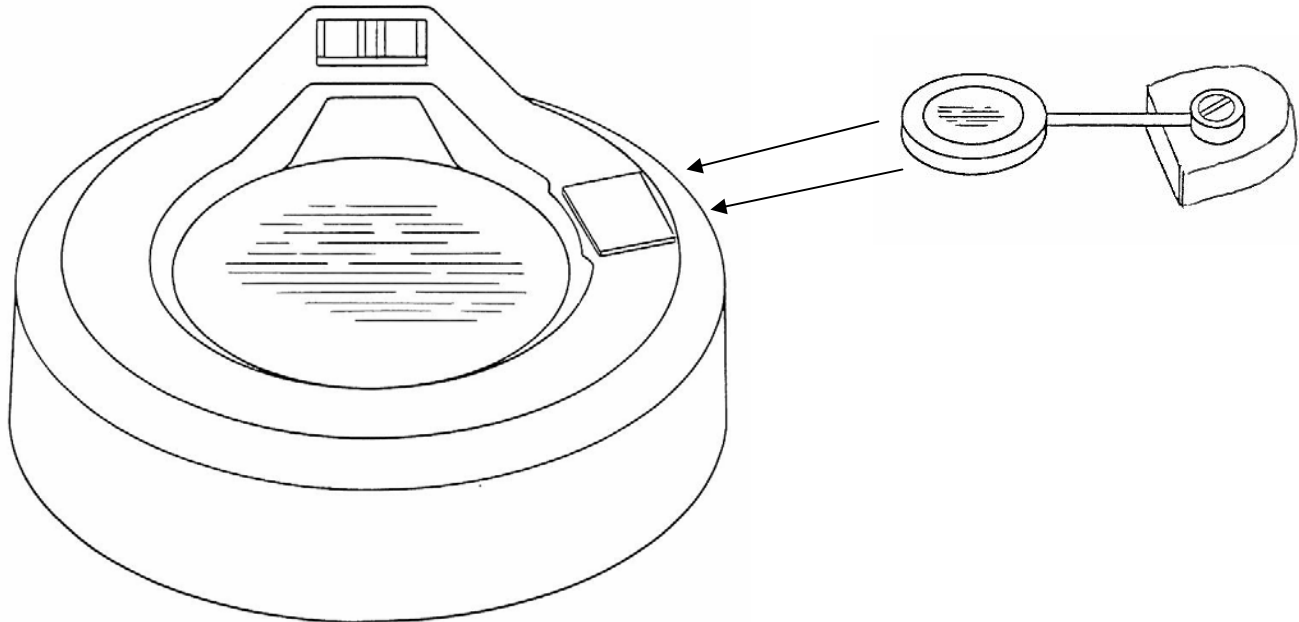

P/N 34639