

Silvy

Installation Instructions



Silvy

Installation Instructions

A.) Mount to Top of Top-Cap



- Flat Top-Cap can accept standard mounting bracket shipped with fixture



- 1.) Remove four screws from Panel-Mount bracket
- 2.) Chose location for panel mount and center on top-cap
- 3.) Use four self-tapping metal screws to secure
- 4.) Drill one ¼" hole in top-cap to either side of bracket

The right light

LUXO

Silvy

Installation Instructions

A.) Mount to Frame – under top-cap



- Run cord through power drops/data cable drops

- 1.) Disconnect cord from fixture (terminal blocks)
- 2.) Remove Strain Relief from bracket (plug available from Luxo to fill the hole in bracket)
- 3.) Start cord from bottom of panel and run up to fixture
- 4.) Know your local electrical codes to see if nylon grommets are needed to run cord through frame



The right light

LUXO


Silvy

Installation Instructions

A.) Mount to Frame – under top-cap



- Wire runs through one of two holes at either side of mounting plate

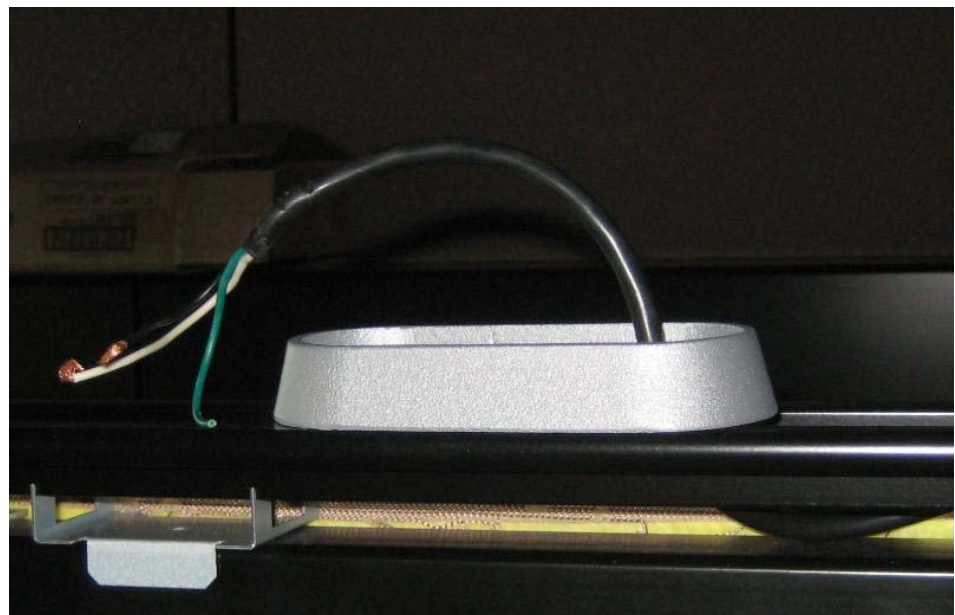

The right light

LUXO

Silvy

Installation Instructions

A.) Mount to Frame – under top-cap

With Frame adapter attached (using four self-tapping metal screws) choose the correct length of bolt to rise 2" above top cap.

- 1.) Re-attach all side panels
- 2.) Re-attach top-cap to line up where to drill two (2) ¼" holes
- 3.) Re-attach top-cap
- 4.) Use lock washer and nut included in panel mount bracket to tighten assembly down onto top-cap (careful not to over-tighten as this may result in damaging the top cap)
- 5.) Bracket installation is complete

The right light



Silvy

Installation Instructions

B.) Attach Head to Fixture



- Use flat-head screw driver to pry open ballast housing on fixture. (very little pressure is needed)

- 1.) Use Allen key (included in box with fixture)
- 2.) Use Allen key to loosen U-bolt that locks fixture onto stems
- 3.) Place fixture over Panel bracket and gently feed wire and chrome stems through holes (you may need to loosen the U-bracket to feed stems into fixture)
- 4.) Tighten U-bracket with Allen key expanding it to lock in grooves cut in stems

The right light



Silvy

Installation Instructions

C.) Complete Installation



5.) Connect – Quick Connect from panel bracket to fixture

6.) Re attach ballast cover by lightly pushing down until it snaps

7.) Insert Lamps (not included)

8.) If fixture came with Pagoda Wings – Attach to center bracket in fixture at this time.

9.) Installation Complete

The right light

LUXO