


LC OPERATING INSTRUCTIONS PLEASE READ BEFORE USING THIS LIGHT

This product contains a spring-balanced arm for balance. It has been folded in half for packaging purposes. In order to avoid damage or possible injury, care *must* be taken in removing the arm from its protective plastic sleeve.

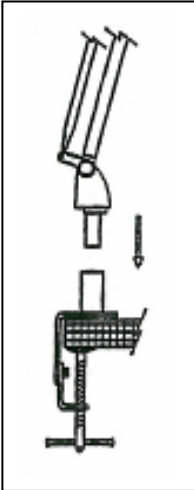

EDGE MOUNT

Secure the clamp in the desired location and place the arm mounting stem into the opening of the clamp adapter.

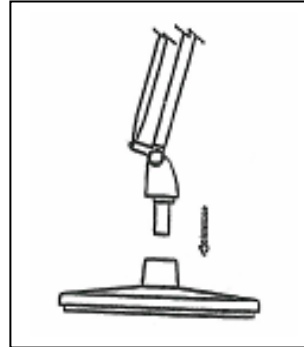


TABLE BASE

Install the arm mounting stem in the base.

To operate this product please follow these simple instructions:

1. Install both a 15-watt compact fluorescent and 22-watt circline fluorescent bulb into the lamp head.
 2. Plug the power cord into an electrical outlet or power strip.
 3. 3-way switch operation:
 - a. Turn the 15-watt compact fluorescent on by using the switch located at the base of the arm (1).
 - b. Then, while the compact fluorescent bulb is lit, push and hold the switch located at the top of the lamp head (2) to operate the 22-watt circline fluorescent bulb.
 - c. To turn all lights off, use the switch located at the base of the arm (1).
- * Please note that the compact fluorescent bulb must be lit in order to illuminate the circline fluorescent bulb.

